

# INSTRUCTIONS FOR UVC BULB REPLACEMENT

## General Information

Item No. DX0101

- UVC bulb for the effective inactivation of harmful molds, viruses, bacteria and yeasts.
- The UVC bulb needs to be changed annually or once the appliance shows the warning message “UCC” on the display.

### IMPORTANT

*Be sure to adhere to these maintenance guidelines. If there isn't sufficient strength of the UVC light, then this means the appliance is not functioning correctly.*



Get more accessories here:  
[www.dry-ager.com/shop](http://www.dry-ager.com/shop)



## Important Safety Information

### ⚠ WARNING

To prevent possible injury due to an electrical shock, be sure to disconnect the power cord or turn off the circuit breaker / unscrew the fuse before replacing the UVC bulb.

### ⚠ WARNING

Don't look into the UV light! Protect skin and eyes from UV light! Before servicing and cleaning disconnect the UV device!

### ⚠ WARNING

Wear protection gloves during the UVC bulb replacement. Quartz glass very fragile! Do not touch quartz glass with bare hands. Stains burn into the glass!

## Model DX 500 Premium | DX 500 Premium S – UVC bulb replacement instructions

1. Compare the UVC bulb type specified in chapter “Maintenance” in the Use and Care Manual of your appliance with the bulb type indicated on the packaging of this replacement bulb. **Only use the replacement bulb if both types match.**
2. Remove all food from inside the appliance and store them in a cool place temporarily.
3. Switch the appliance off. Then disconnect the power cord or turn off the circuit breaker.



4. Wear protection gloves.



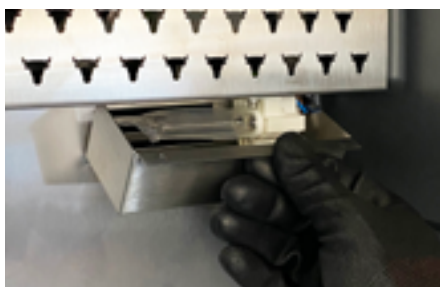
5. Unscrew the cover with a Phillips screwdriver.



6. Pull the cover downwards and remove it.



7. Pull out the old UVC bulb carefully then carefully insert the replacement UVC bulb. **Do not remove the outer plastic cover of the UVC replacement bulb.**



 

 
8. Mount the cover.









9. Screw the cover back into place.

10. Reset the information on the controller. Please take into account your DRY AGER model.

#### DX 500 Premium

- Press  and **SET% RH** together and hold both keys for a minimum of 2 sec.
- Select with button  the parameter **UcH** and confirm it with the key **SET% RH**. The displayed value is flashing.
- Press button . The displayed value changes to „0“.
- After 1 minute the display automatically switches back into the standard mode.

#### DX 500 Premium S

- Press  and  together and hold both keys for a minimum of 2 sec.
- **Std** is now shown in the display. Confirm this with the key .
- Use the key  to select the parameter **UcH** and confirm it with the key . The displayed value is flashing.
- Press button . The displayed value changes to „0“.
- After one minute, the display automatically switches back to the standard mode.

## Model DX 1000 Premium / DX 1000 Premium S – UVC bulb replacement instructions

1. Compare the UVC bulb type specified in chapter “Maintenance” in the Use and Care Manual of your appliance with the bulb type indicated on the packaging of this replacement bulb. **Only use the replacement bulb if both types match.**

2. Remove all food from inside the appliance and store them in a cool place temporarily.

3. Switch the appliance off. Then disconnect the power cord or turn off the circuit breaker.



4. Wear protection gloves.



5. Unscrew the cover with a Phillips screwdriver.



6. Slide the cover out of the rear holding.



7. Pull out the old UVC bulb carefully then carefully insert the replacement UVC bulb. **Do not remove the outer plastic cover of the UVC replacement bulb.**



 

 
8. Slide the cover back onto the rear holding.









9. Screw the cover back into place.

10. Reset the information on the controller. Please take into account your DRY AGER model.

#### DX 1000 Premium

- Press  and **SET% RH** together and hold both keys for a minimum of 2 sec.
- Select with button  the parameter **UcH** and confirm it with the key **SET% RH**. The displayed value is flashing.
- Press button . The displayed value changes to „0“.
- After 1 minute the display automatically switches back into the standard mode.

#### DX 1000 Premium S

- Press  and  together and hold both keys for a minimum of 2 sec.
- **Std** is now shown in the display. Confirm this with the key .
- Use the key  to select the parameter **UcH** and confirm it with the key . The displayed value is flashing.
- Press button . The displayed value changes to „0“.
- After one minute, the display automatically switches back to the standard mode.

Information Print Product:  
Art.-Nr.: OIDX0101



Landig + Lava GmbH & Co. KG – Weitere Angaben erhalten Sie gerne auf Anfrage.  
Technische Änderungen und Druckfehler vorbehalten. Stand: 04/2022

